

1. Power the Screen.



2. Power the Receipt Printer and Connect it to the Screen.



3. Connect the Cash Drawer to the Printer.

